


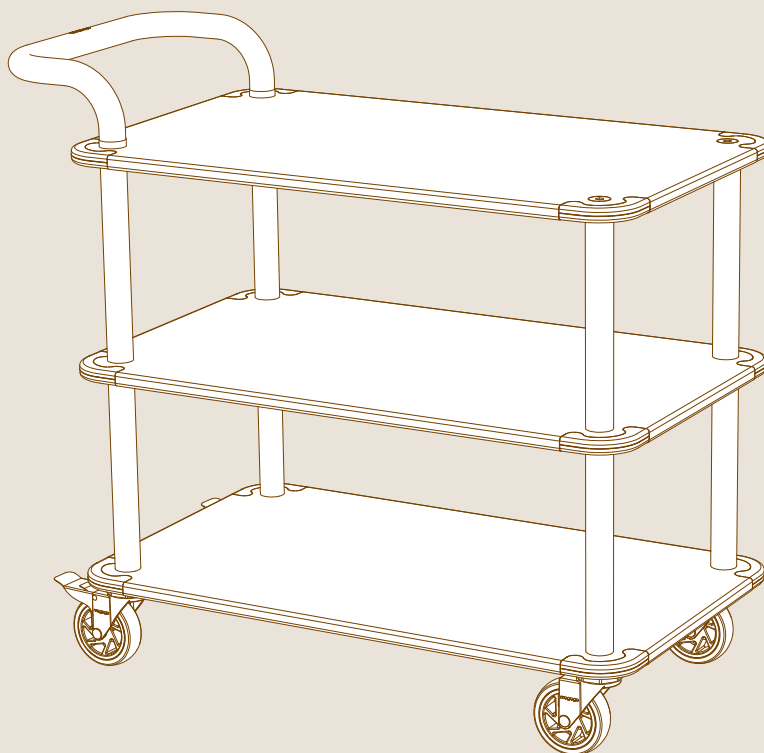


SERVICE CART

ASSEMBLY INSTRUCTIONS




PARTS

X1




ALLEN KEY FOR M16

X1




FLAT KEY

X2



M16 ALLEN SCREWS

X2



SCREW CAPS

X3




BAMBOO BASIC TOPS L35.4" W20.8" | L90cm W53cm

X1




BROWN SYNTHETIC LEATHER HANDLE

X6




SERVICE CART SEGMENTS
12" | 30cm

X2




SERVICE CART SEGMENTS
12" | 30cm

X2



CASTERS

X2




CASTERS WITH BRAKES


ASSEMBLY

- 1


Disassemble legs into segments.

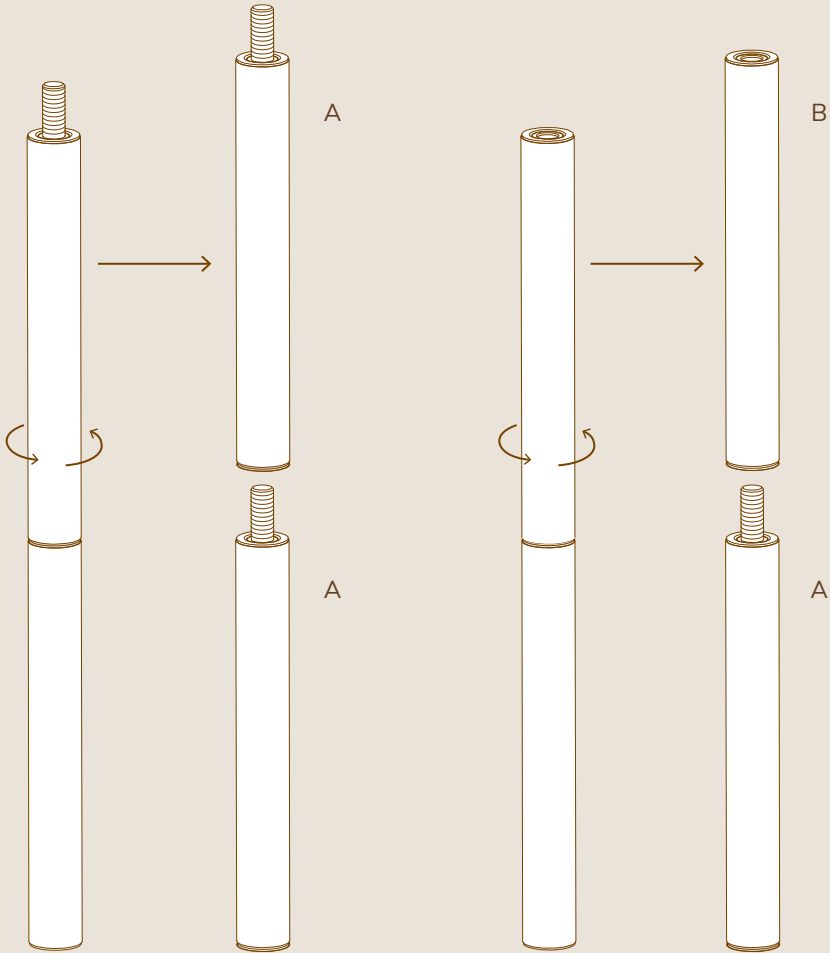

- 2 Start by turning one panel on its side.

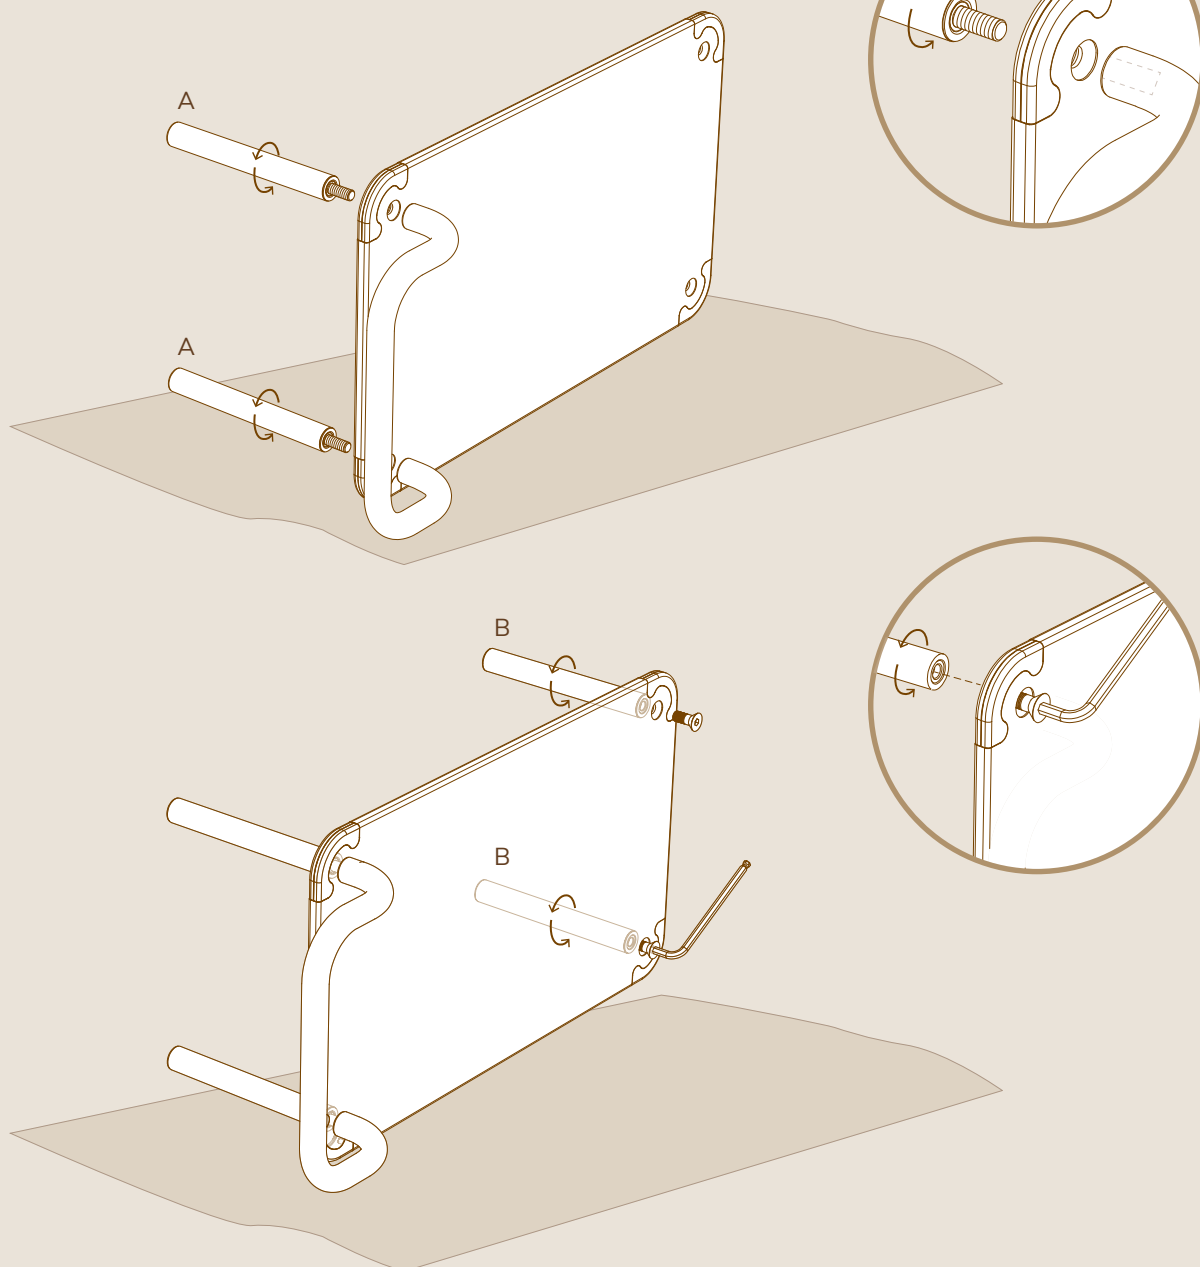


- 3 Turn the panel all the way over.

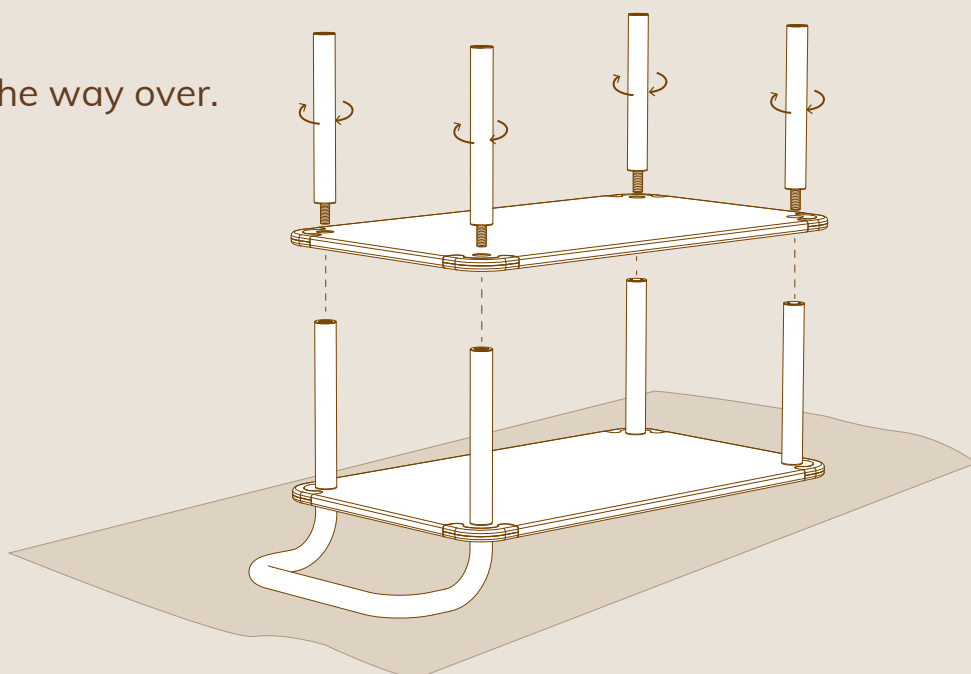


4

Screw the casters on and tighten using the flat key.
Casters with brakes should be aligned to the handle.

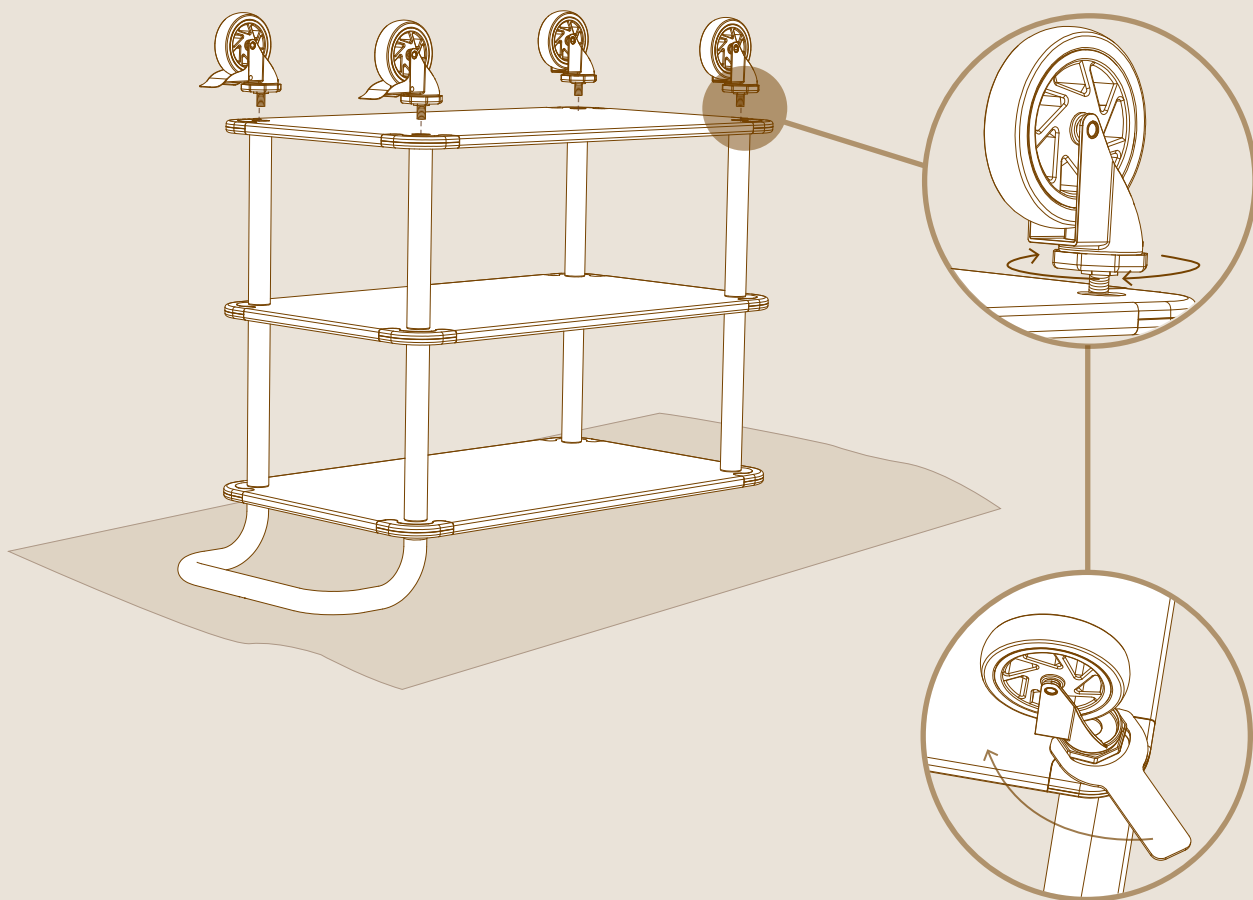

5

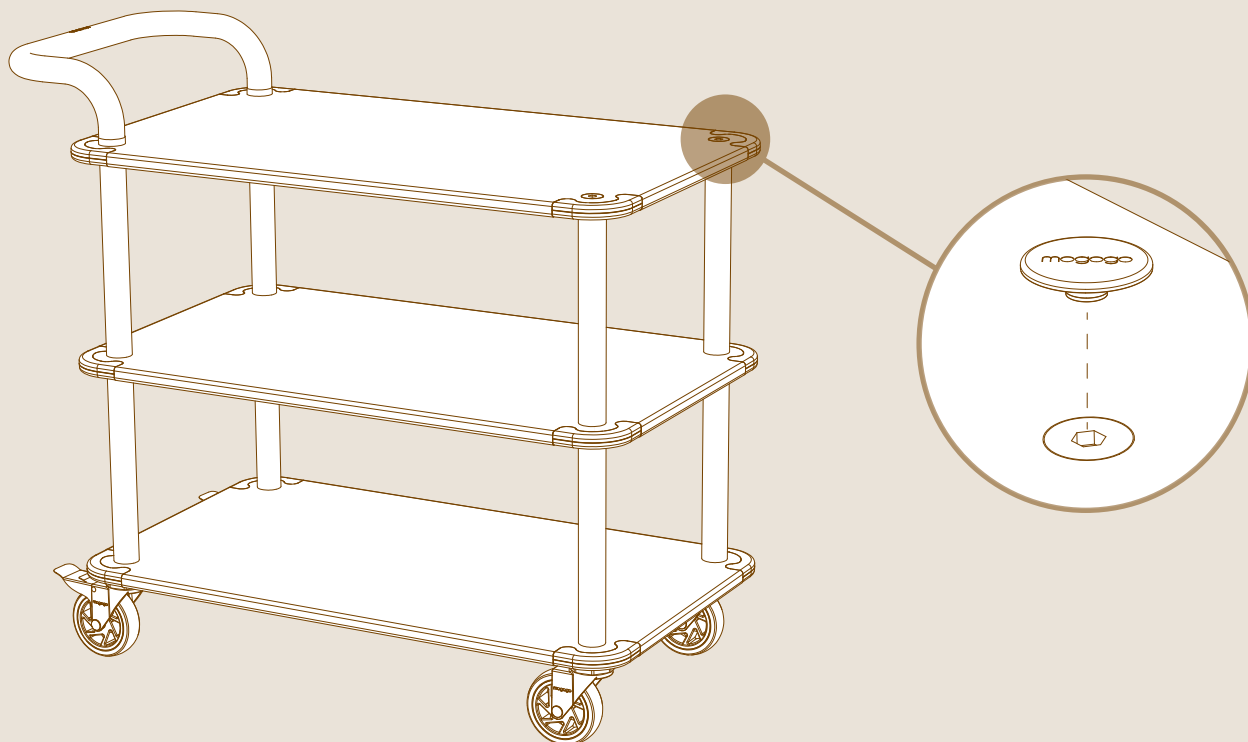


GREAT JOB, YOUR GOOD TO GO!




TOP RAIL BORDER

ASSEMBLY INSTRUCTIONS

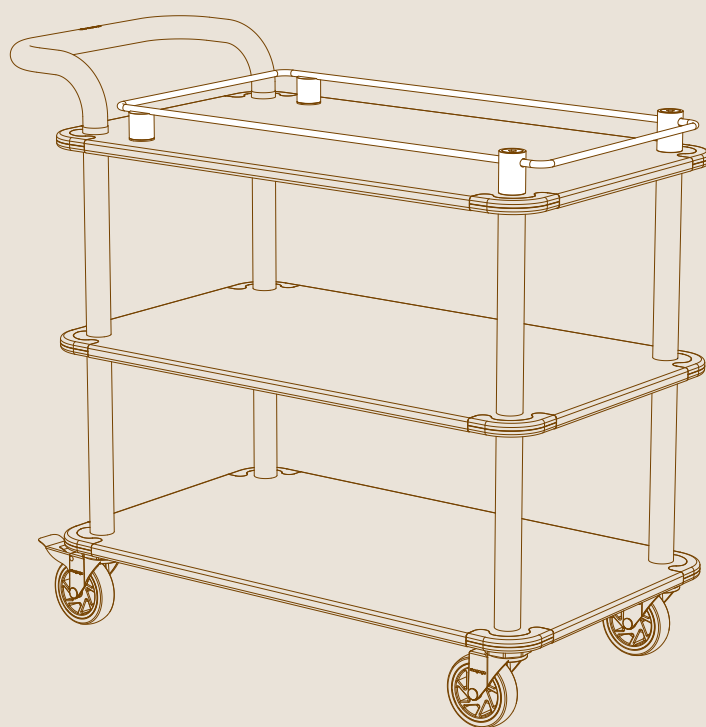

PARTS

x1




ALLEN KEY FOR M16

x2



4" M16 ALLEN SCREWS L4" | L10cm

x1

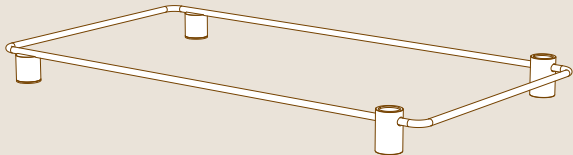


TOP RAIL BORDER

ASSEMBLY


1



2

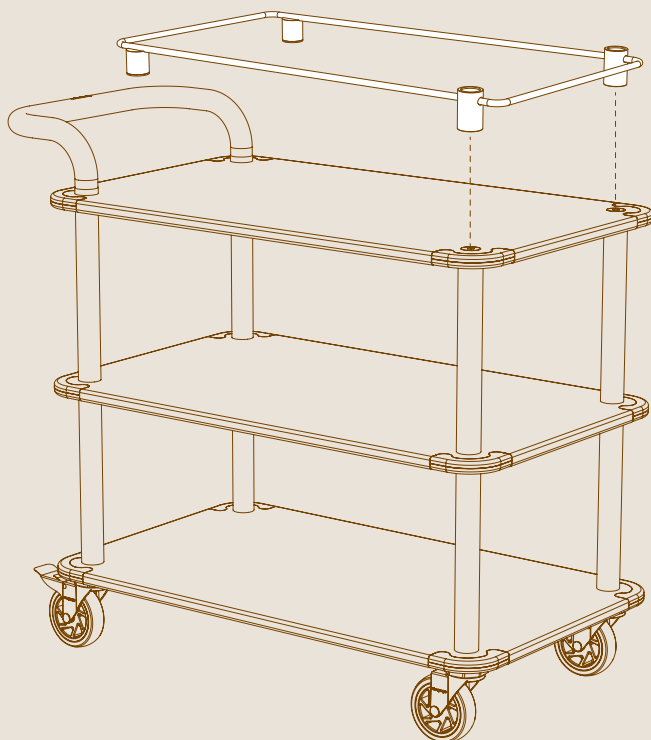

3

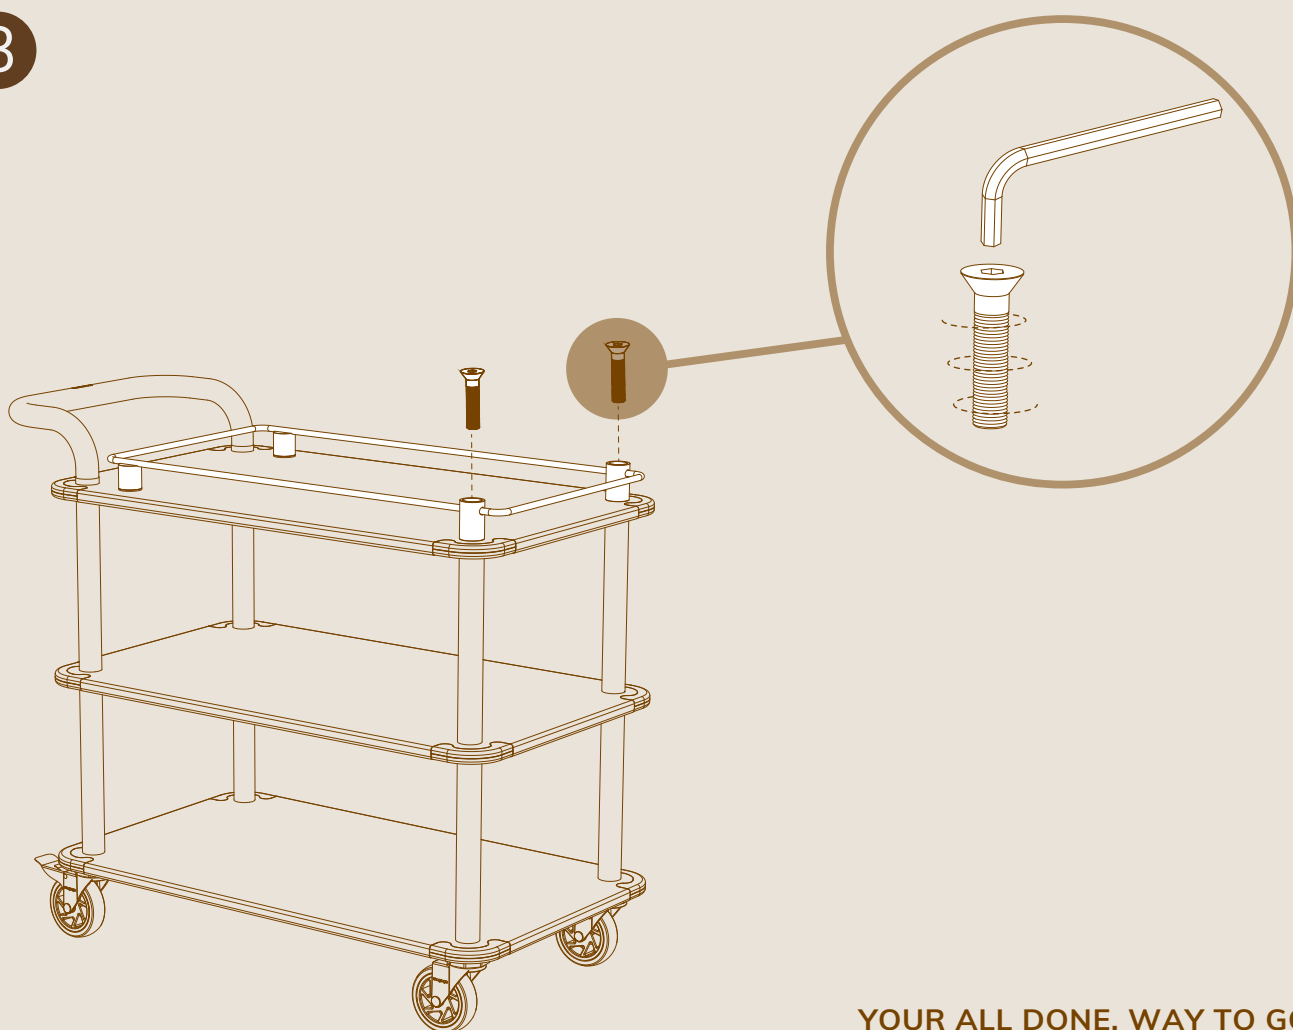


YOUR ALL DONE, WAY TO GO!






CUTTING BOARD

ASSEMBLY INSTRUCTIONS

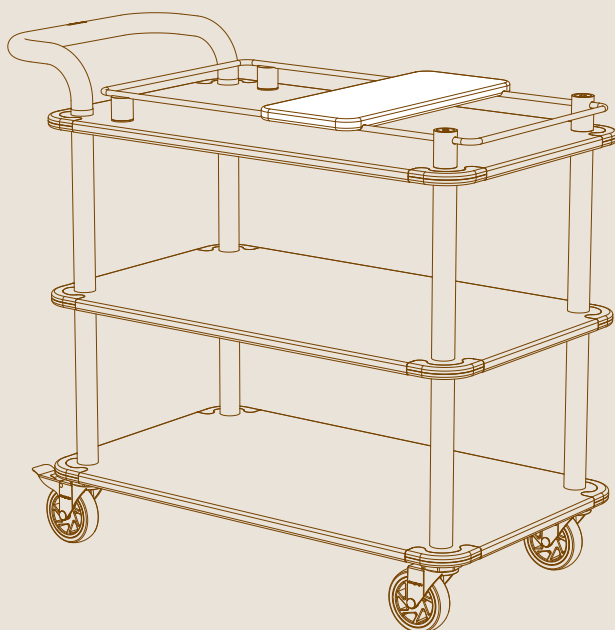


PARTS

x1

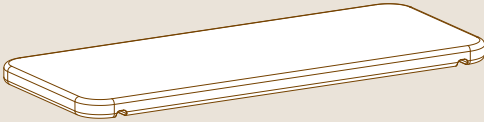

CUTTING BOARD

ASSEMBLY

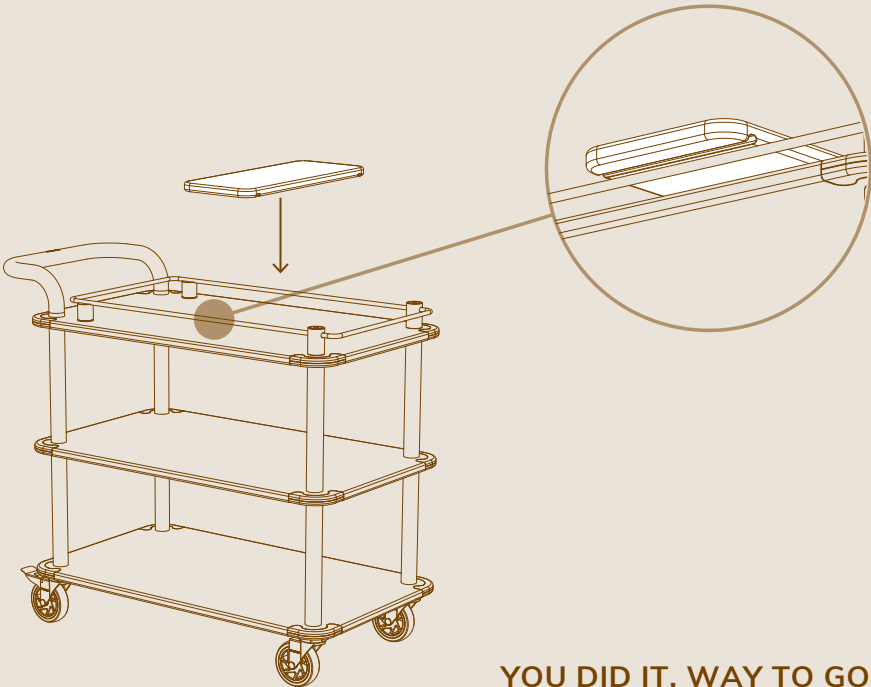

YOU DID IT, WAY TO GO!




BUFFET SOLUTIONS

Roll'n

SERVICE CARTS

CHEESE TRAY

ASSEMBLY INSTRUCTIONS

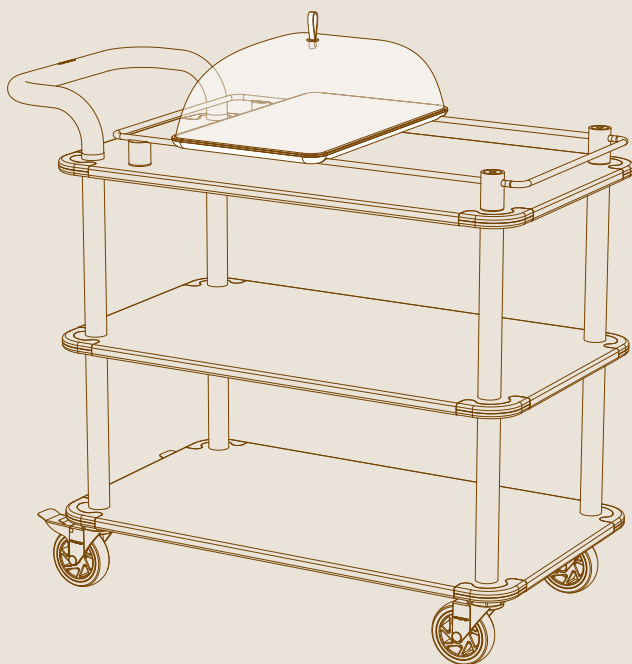


PARTS

X1



BAMBOO CHEESE TRAY


X1

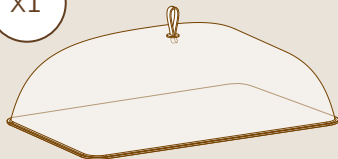

CHEESE COVER

✦✦✦ Clean with a damp cloth

ASSEMBLY

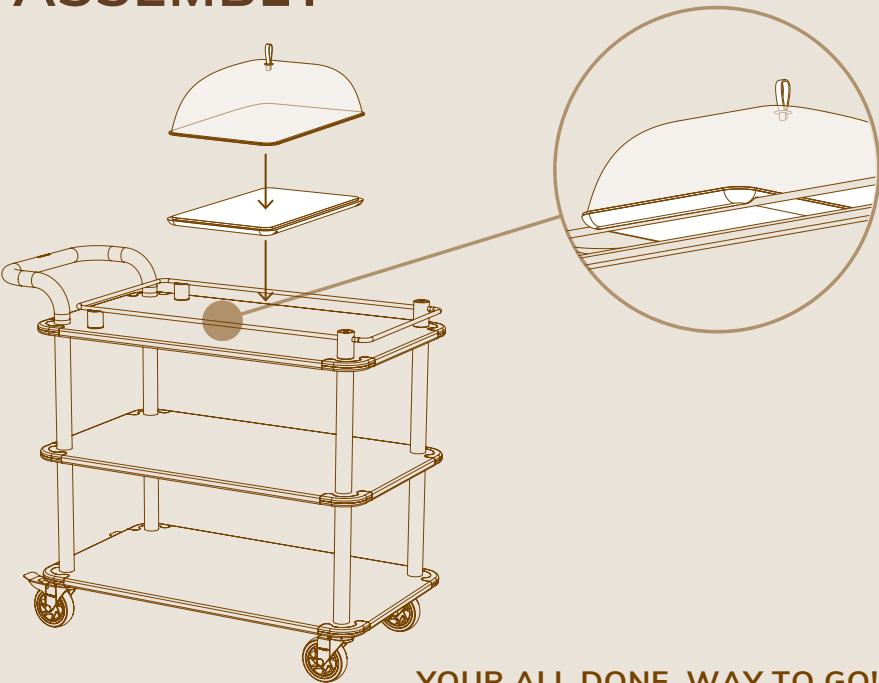

YOUR ALL DONE, WAY TO GO!



BUFFET SOLUTIONS



SERVICE CARTS

LEATHER TOWEL HANGER

ASSEMBLY INSTRUCTIONS




PARTS

X1



SYNTHETIC LEATHER STRAP

X1

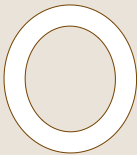

METAL RING

ASSEMBLY



YOUR ALL DONE, WAY TO GO!

PARTS


x1



WINE GLASS HOLDER

ASSEMBLY

1

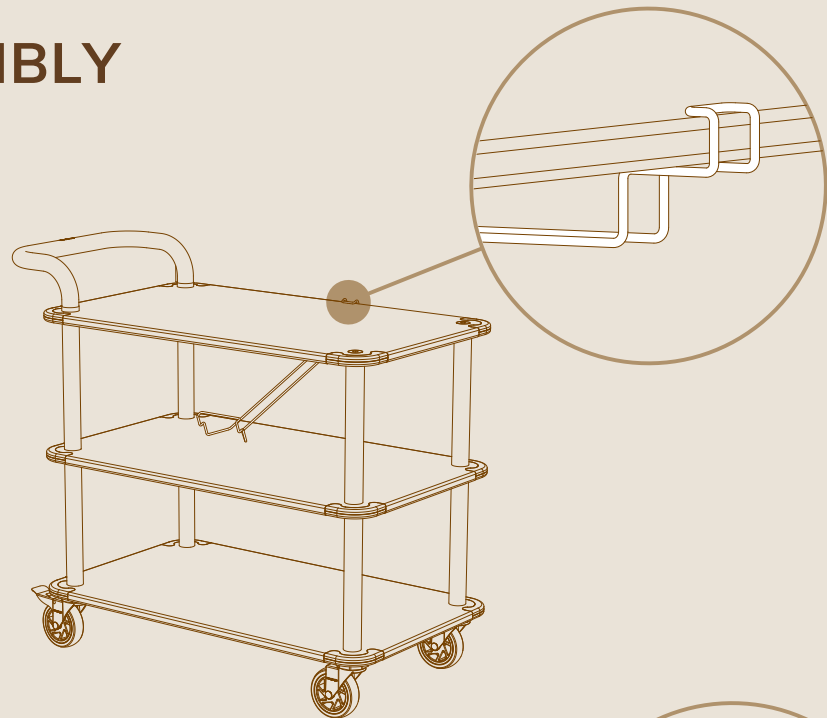


2




JOB WELL DONE, WAY TO GO!

WINE GLASS HOLDER
ASSEMBLY INSTRUCTIONS

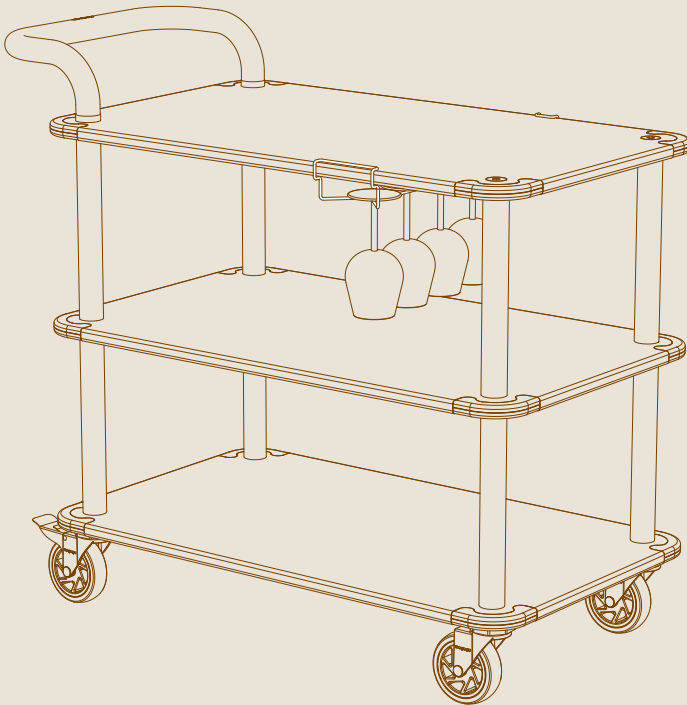

WINE GLASS HOLDER

ASSEMBLY INSTRUCTIONS

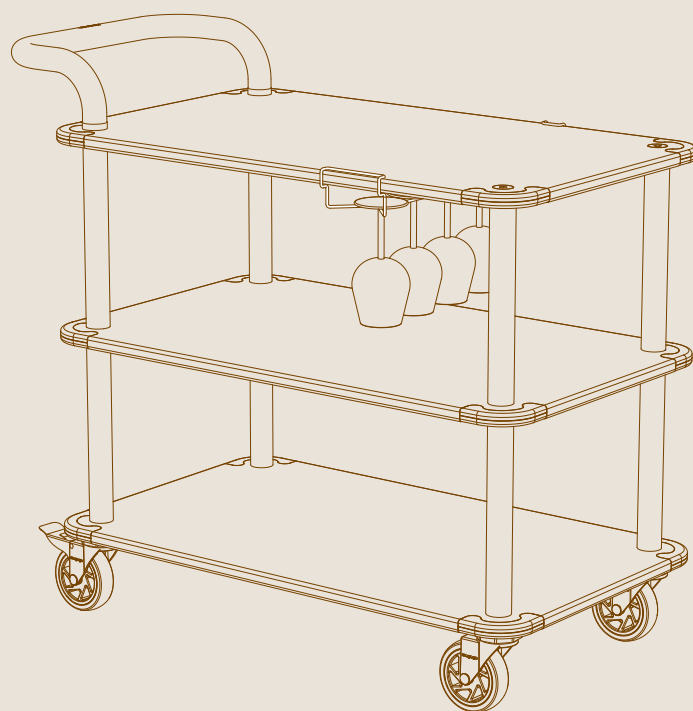

PARTS

x1




WINE GLASS HOLDER

ASSEMBLY

1



2

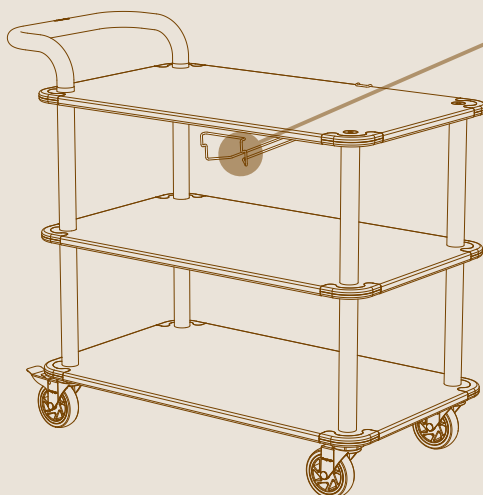


JOB WELL DONE, WAY TO GO!




QUICK COVER FOR SERVICE CART

ASSEMBLY INSTRUCTIONS

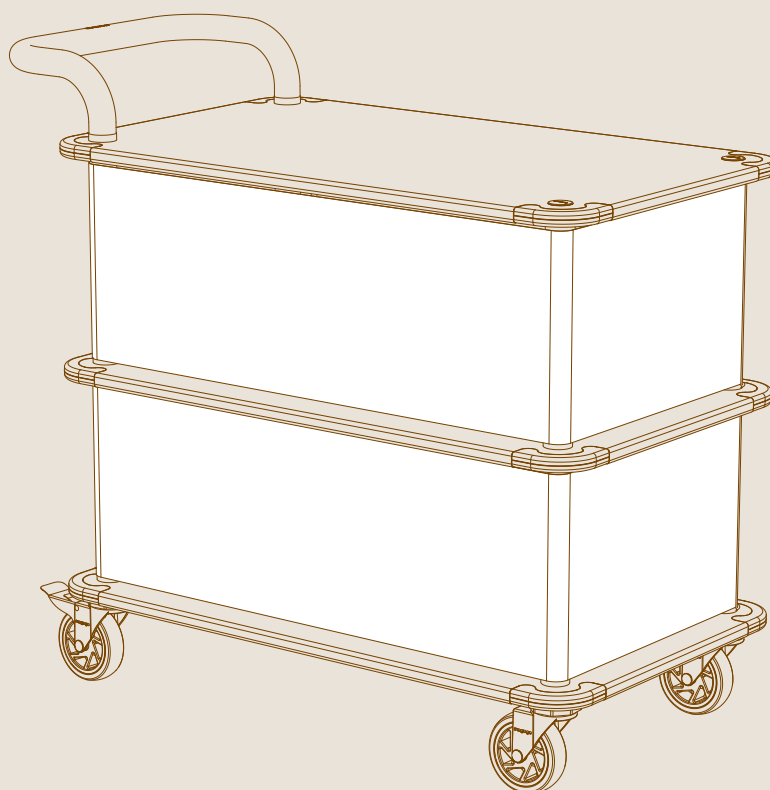

PARTS


x2

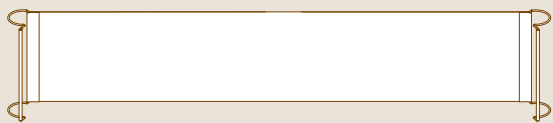


QUICK COVER FOR SERVICE CART L70" W12.6" | L178cm W32cm

ASSEMBLY

1

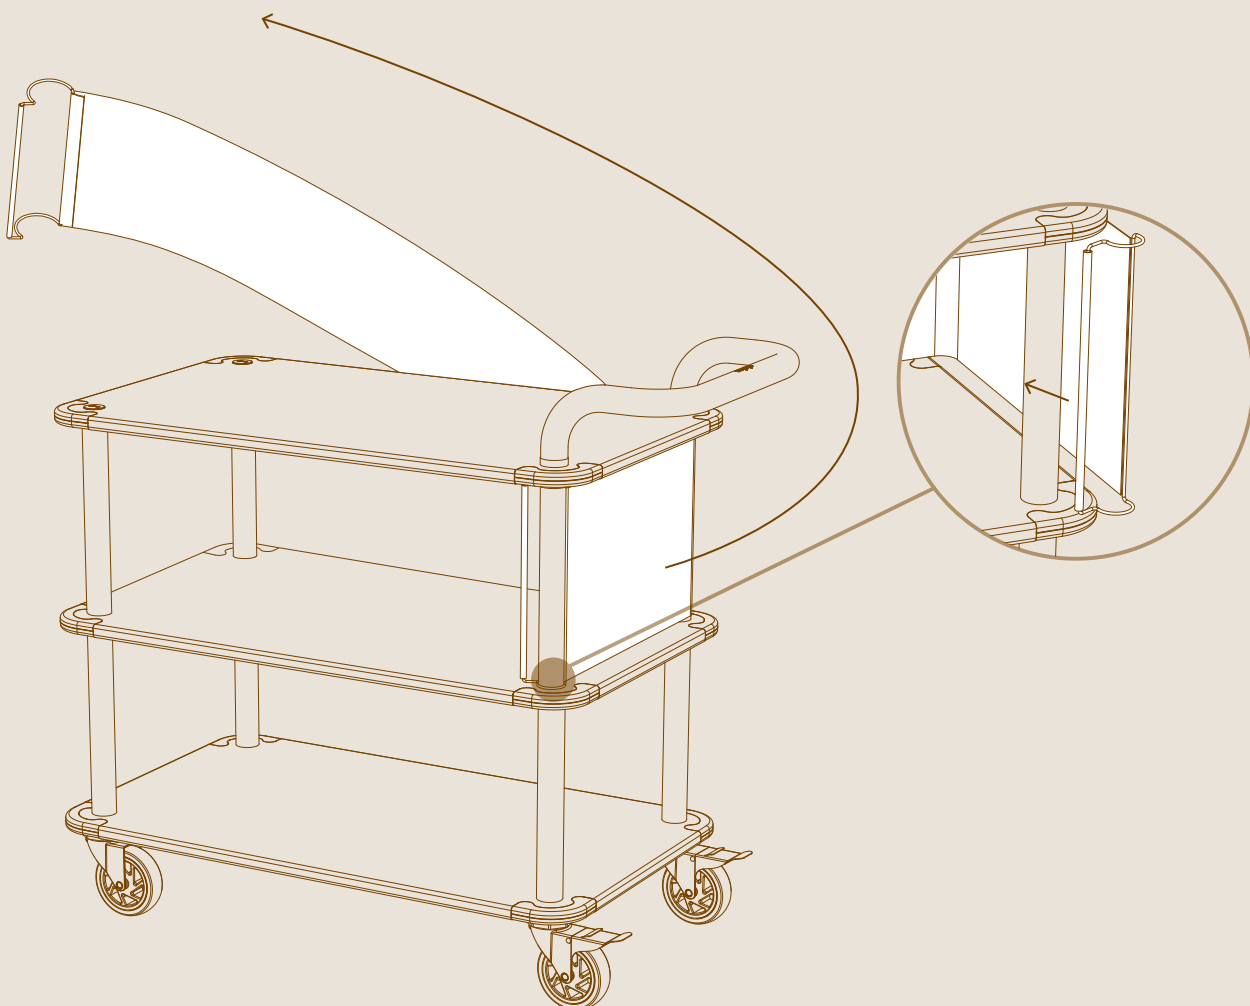


2



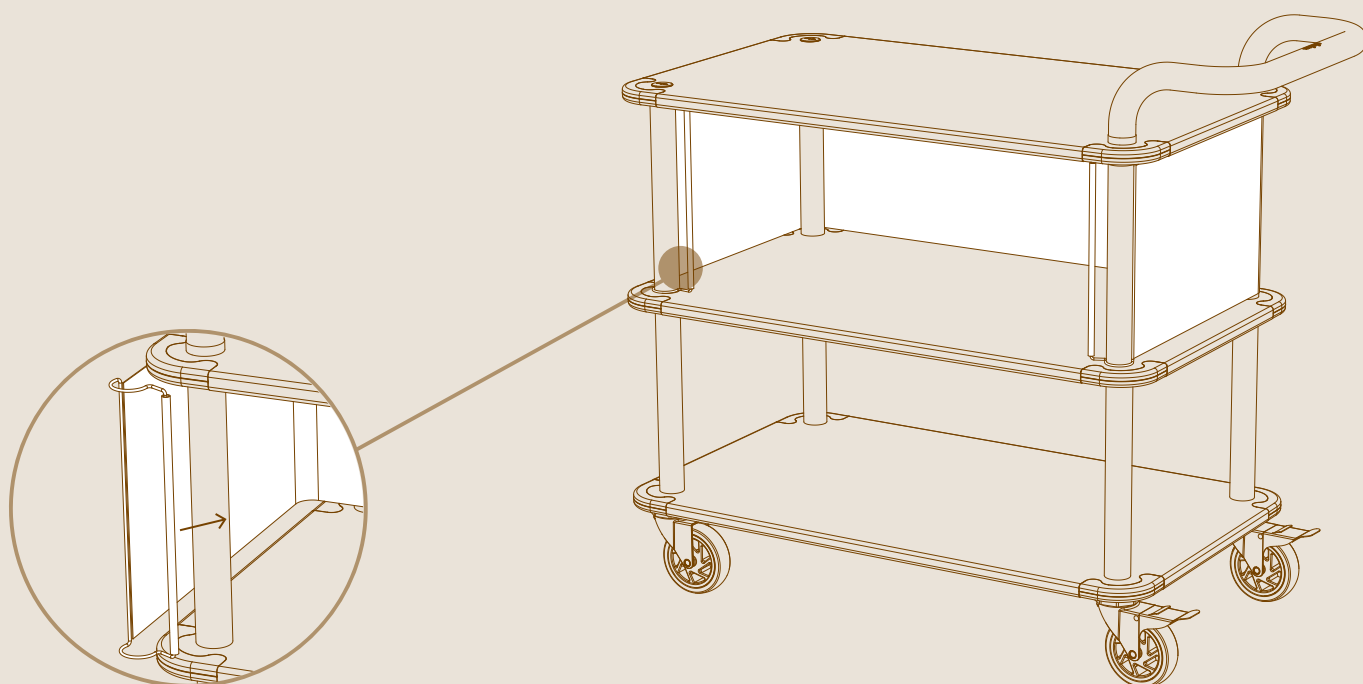


3

Evenly tighten the quick-cover using the bars on both sides.

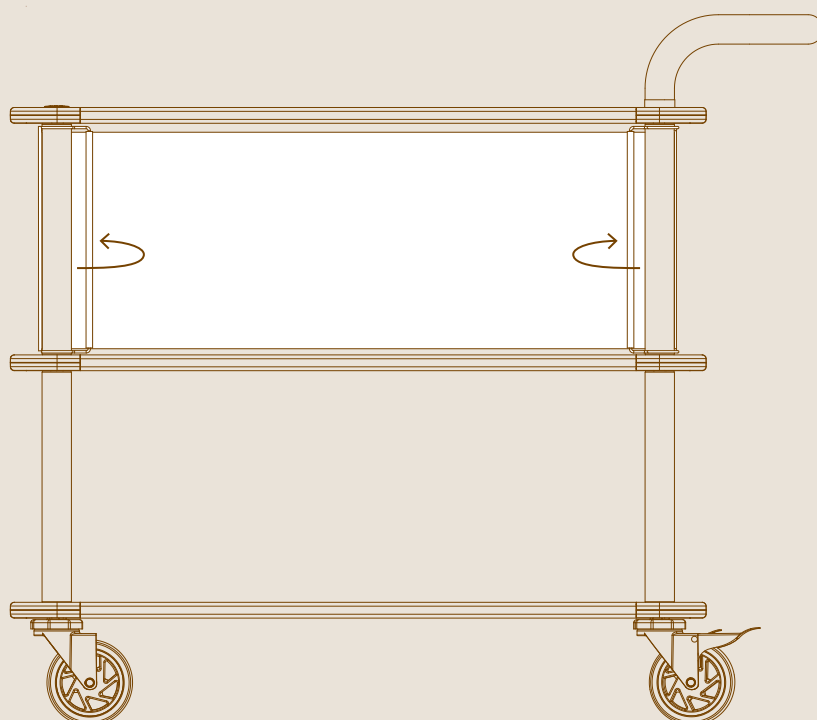


DESIGN PROPOSALS

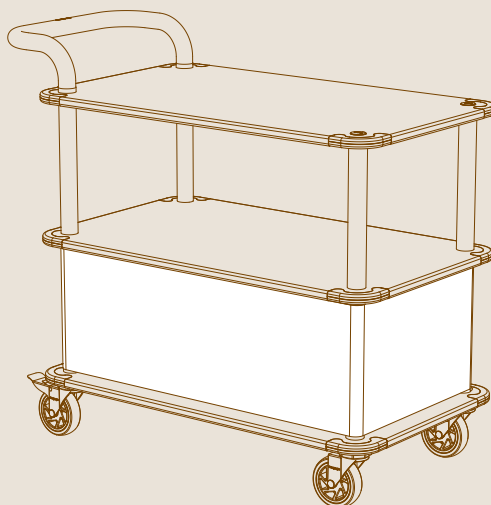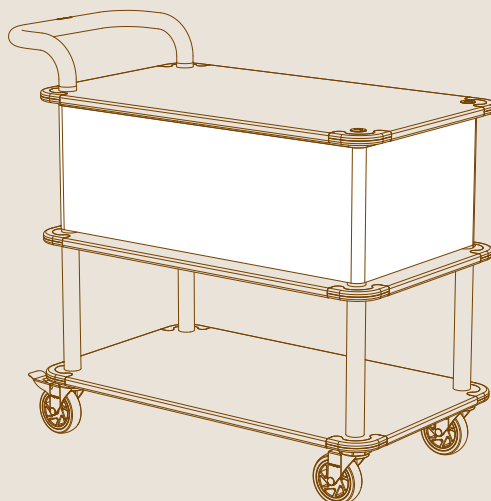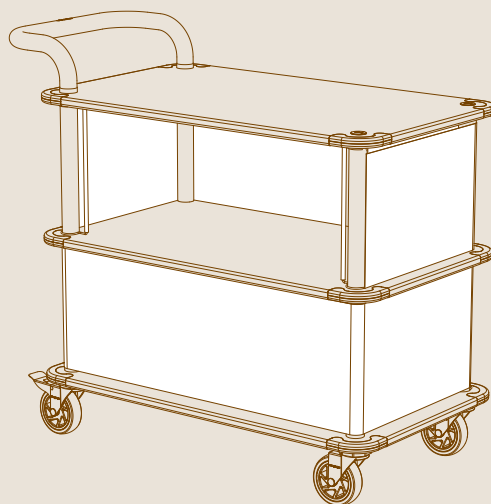

GREAT JOB, YOUR GOOD TO GO!

Roll'n
SERVICE CARTS

SERVICE CART SHELVES
ASSEMBLY INSTRUCTIONS

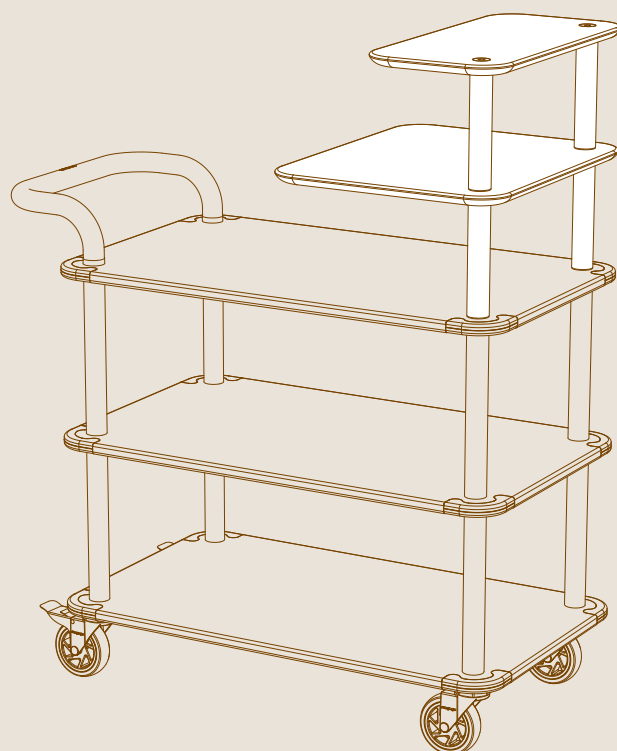


PARTS


<div><div>x1</div><div></div><div>ALLEN KEY FOR M16</div></div>	<div><div>x1</div><div></div><div>SERVICE CART SHELF L21" W18" L53cm W45cm</div></div>	<div><div>x4</div><div></div><div>SHELF SEGMENT L8" L20cm</div></div>
<div><div>x2</div><div></div><div>M16 ALLEN SCREWS</div></div>	<div><div>x1</div><div></div><div>SERVICE CART SHELF L21" W10.5" L53cm W26.5cm</div></div>	
<div><div>x2</div><div></div><div>SCREW CAPS</div></div>		

ASSEMBLY

1

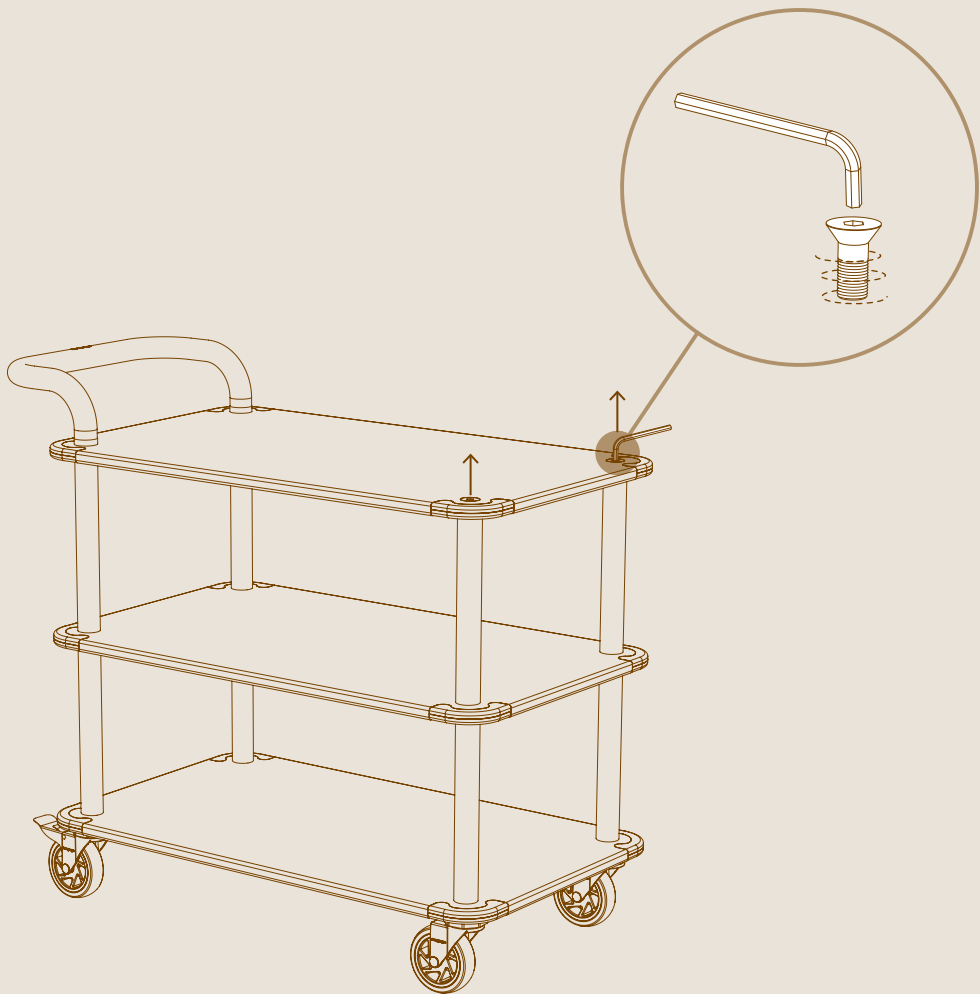


2

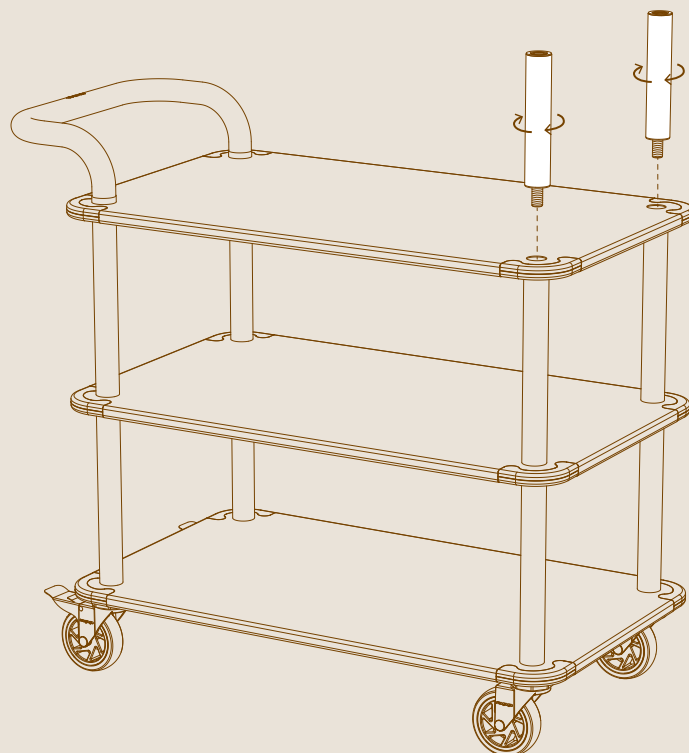


3

* For one shelf close with M16 allen screws and screw caps.


For two shelves skip to step 4.

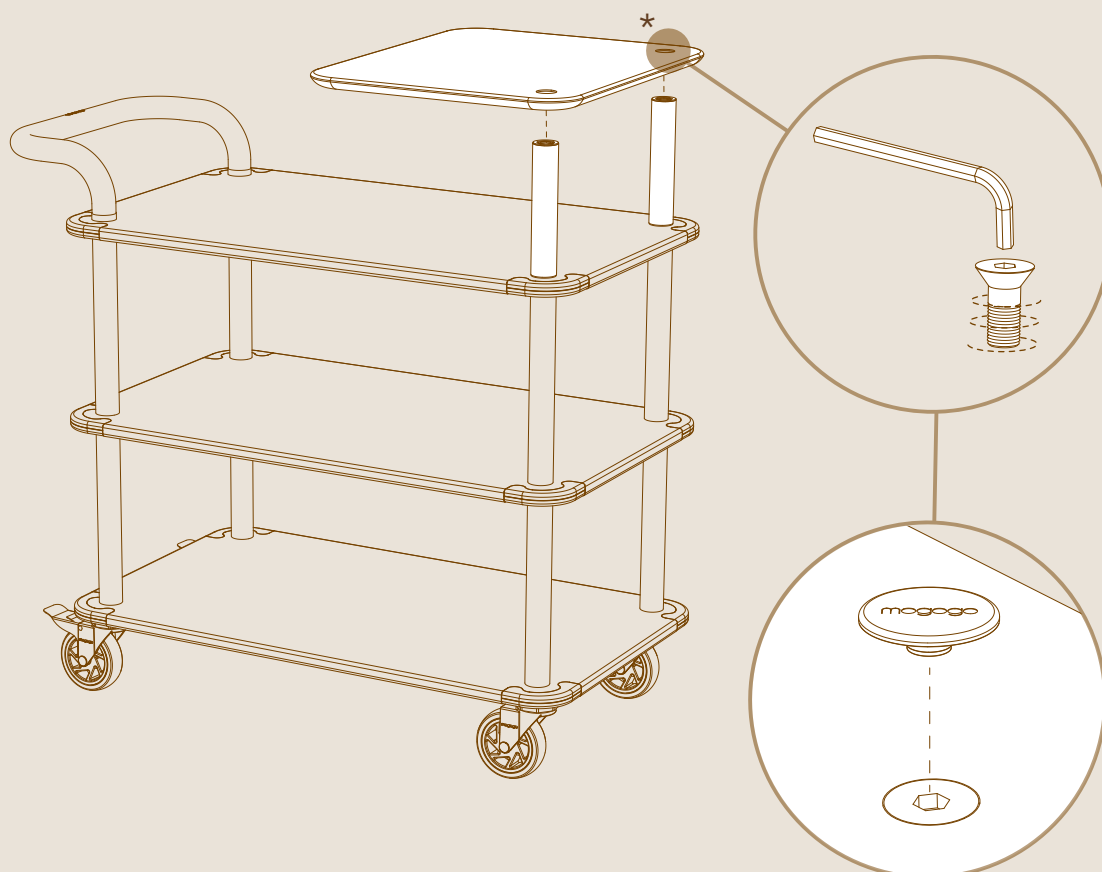

4

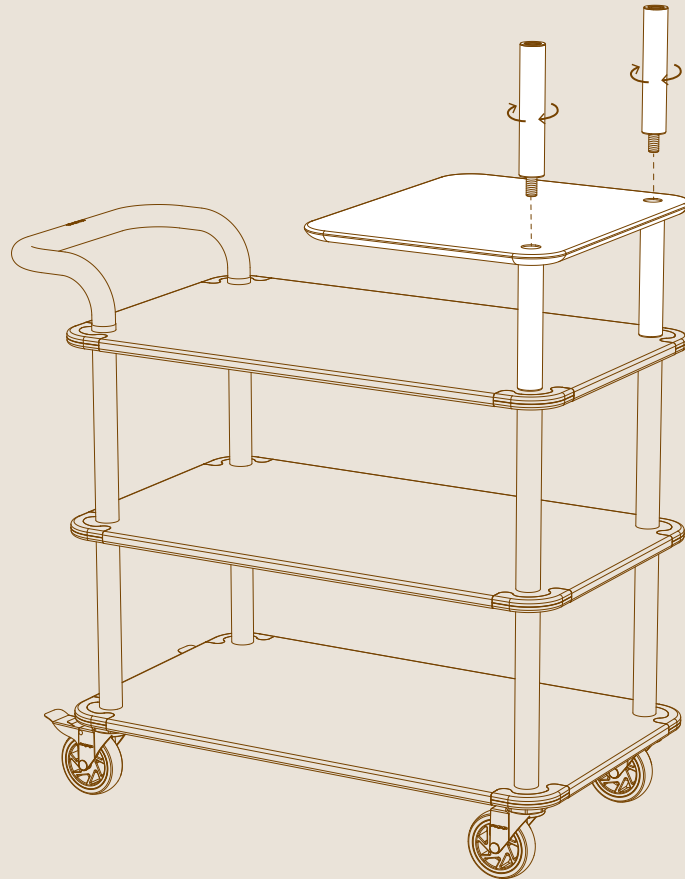

5

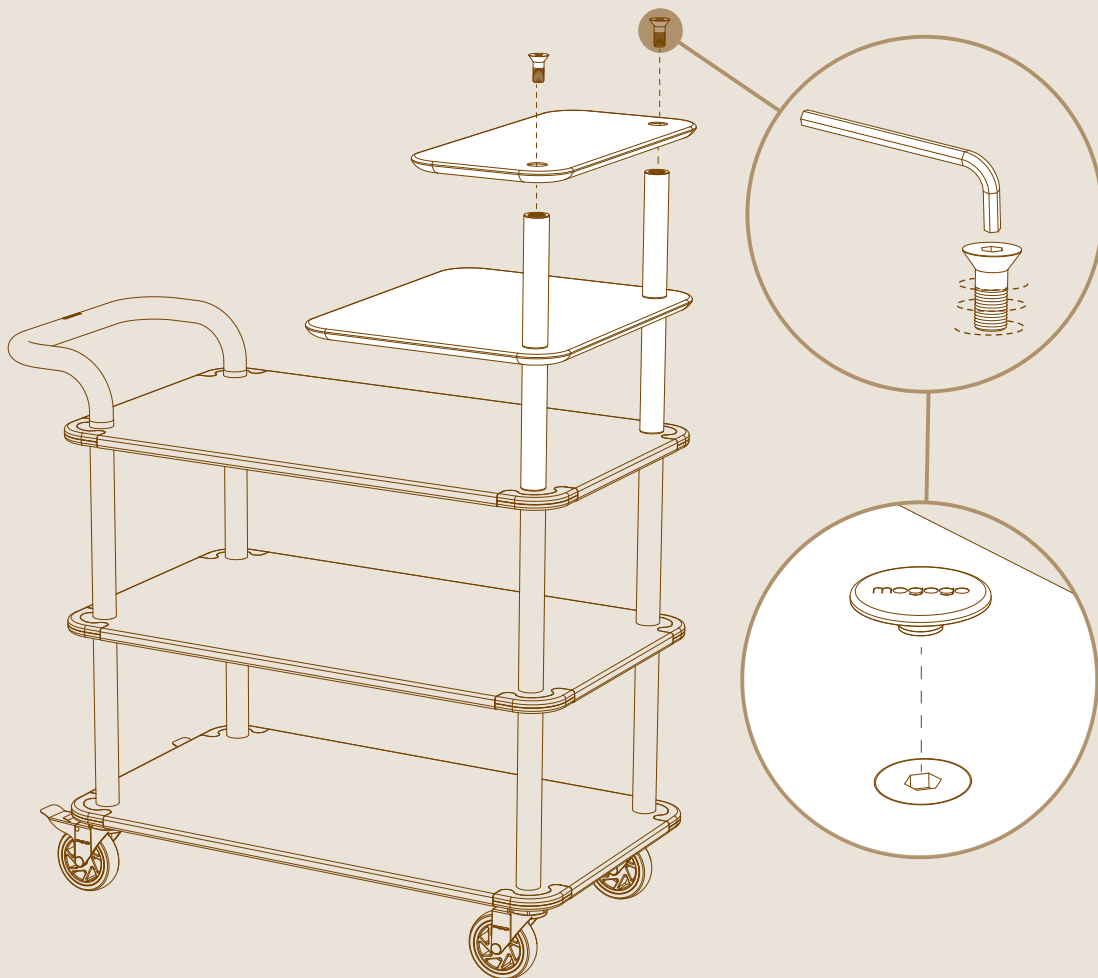

YOUR ALL DONE, WAY TO GO!